



# FourUs®


## Work Booth

---

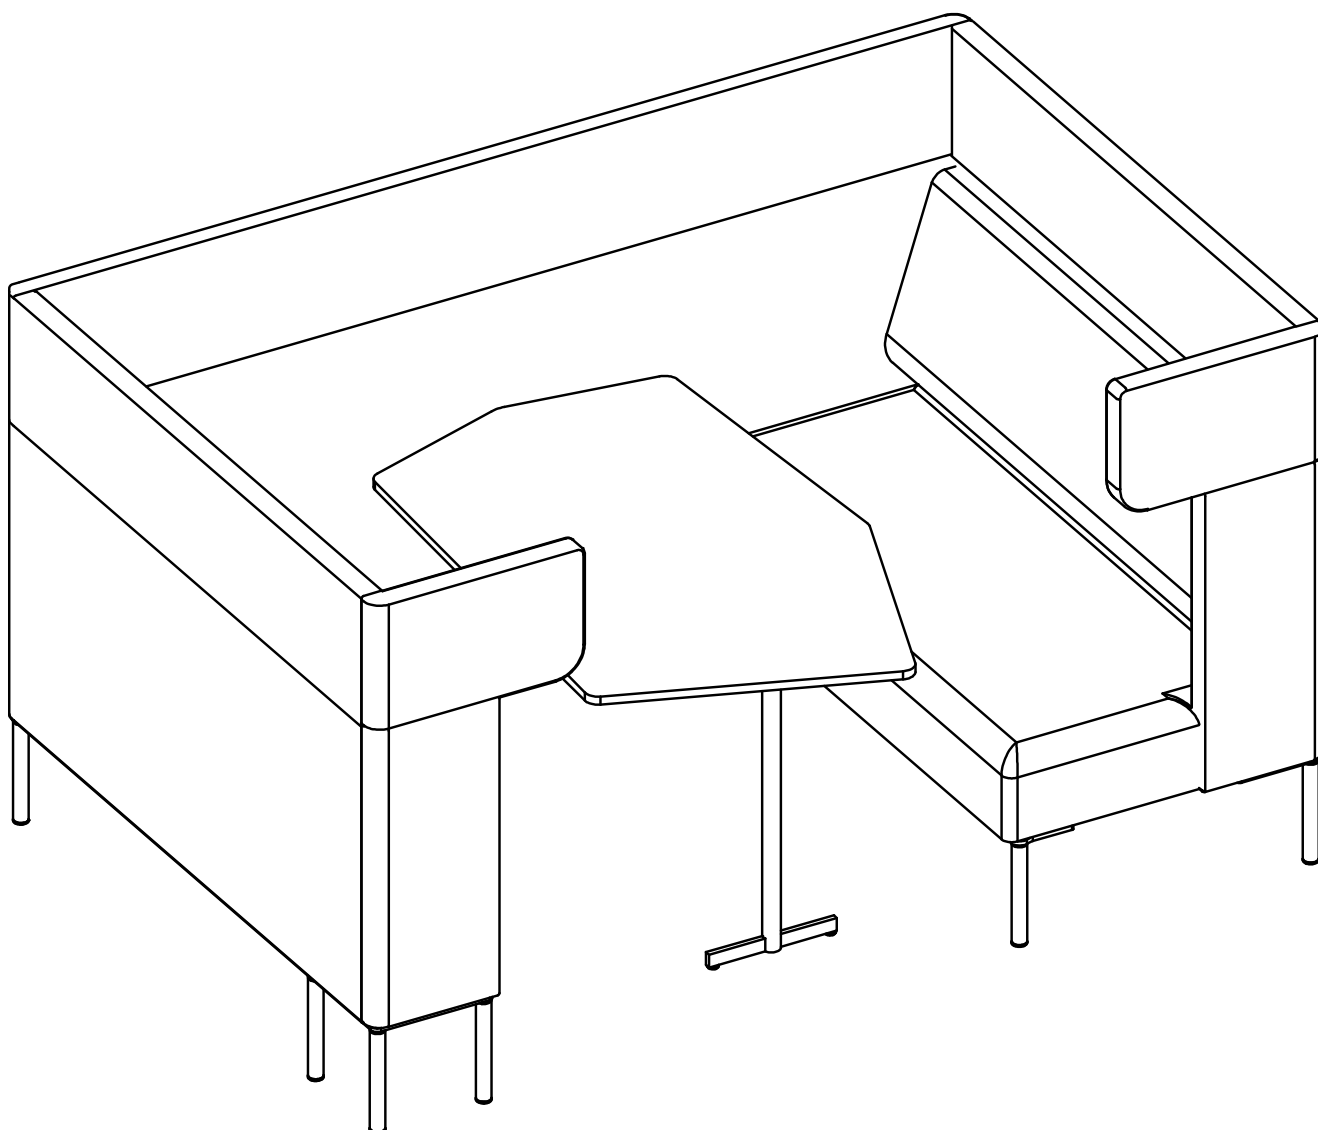


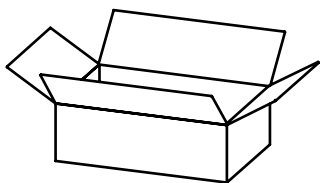


1

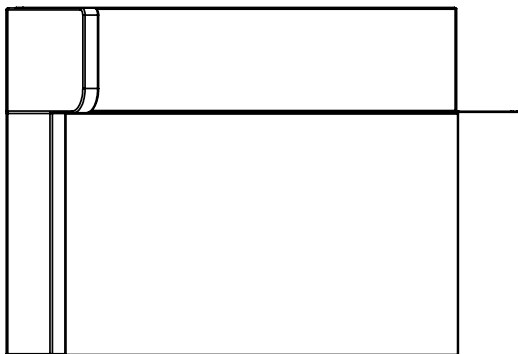


2

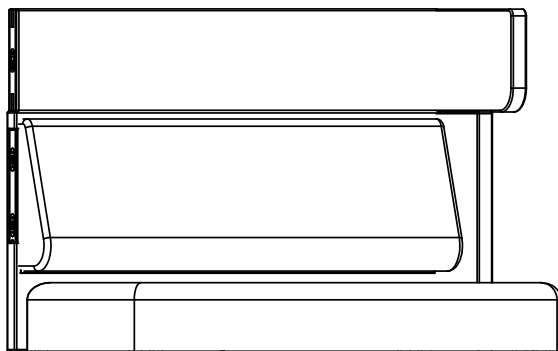


3




4

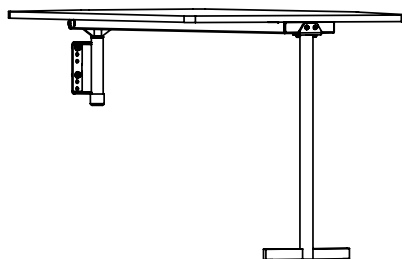


5

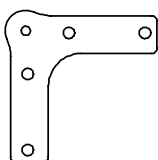


6

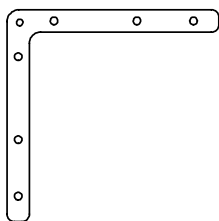

7

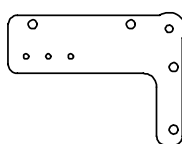

8



9



10



11



12





13




14




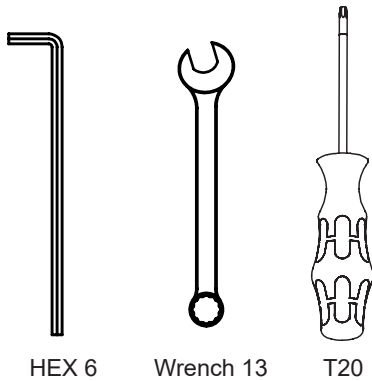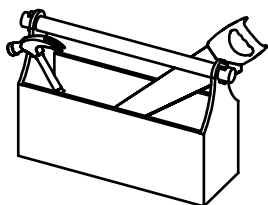


1

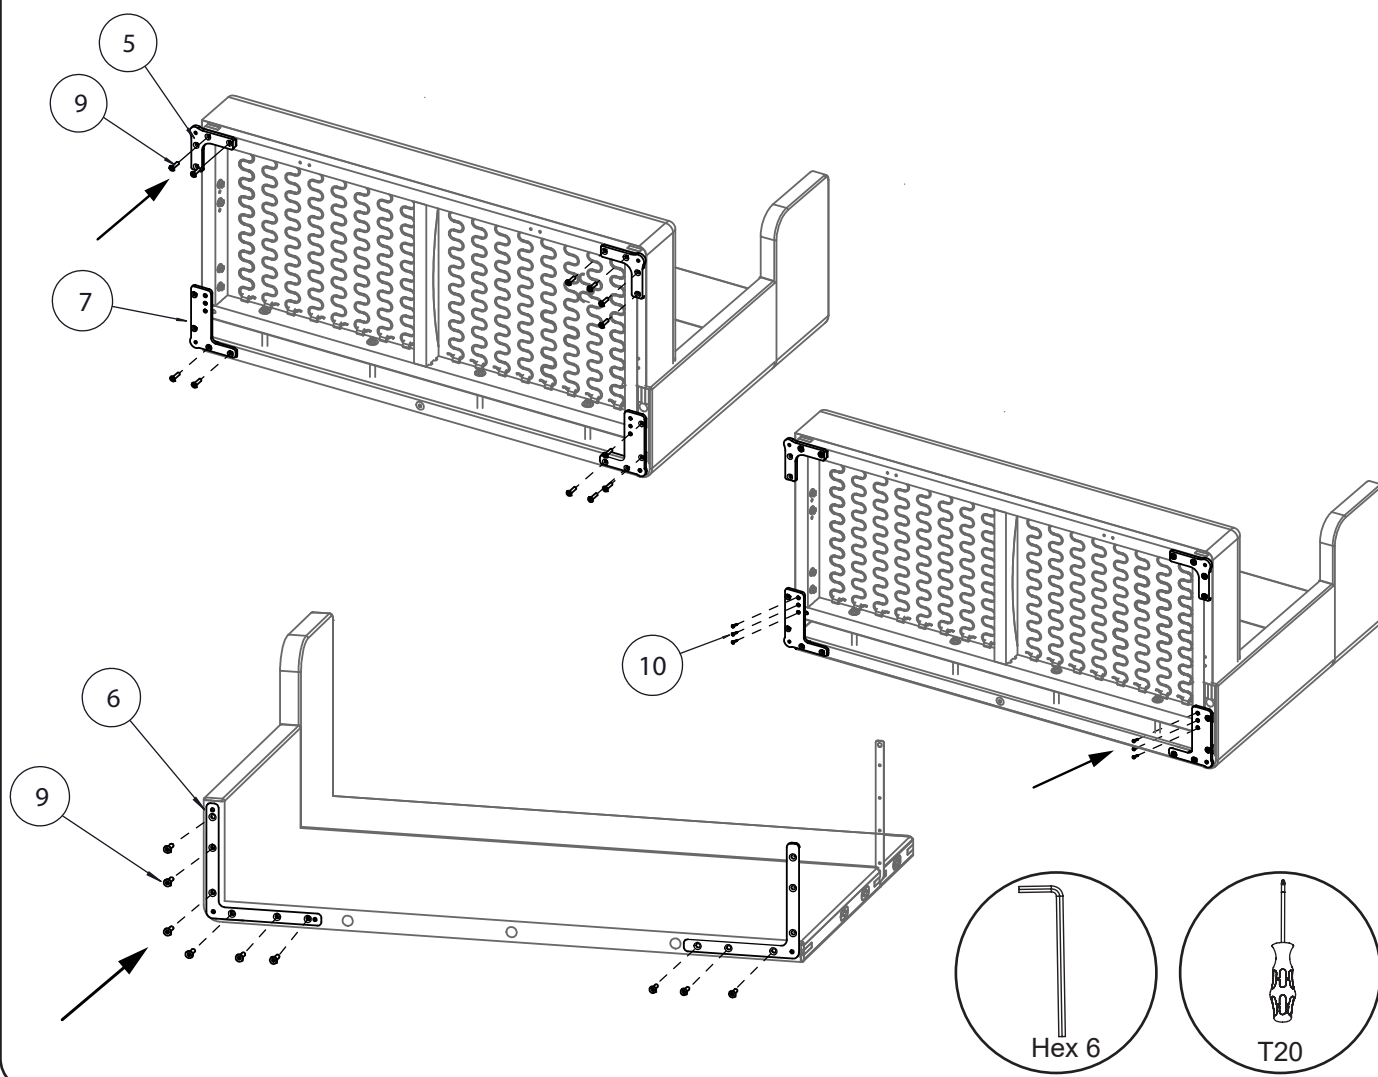


2

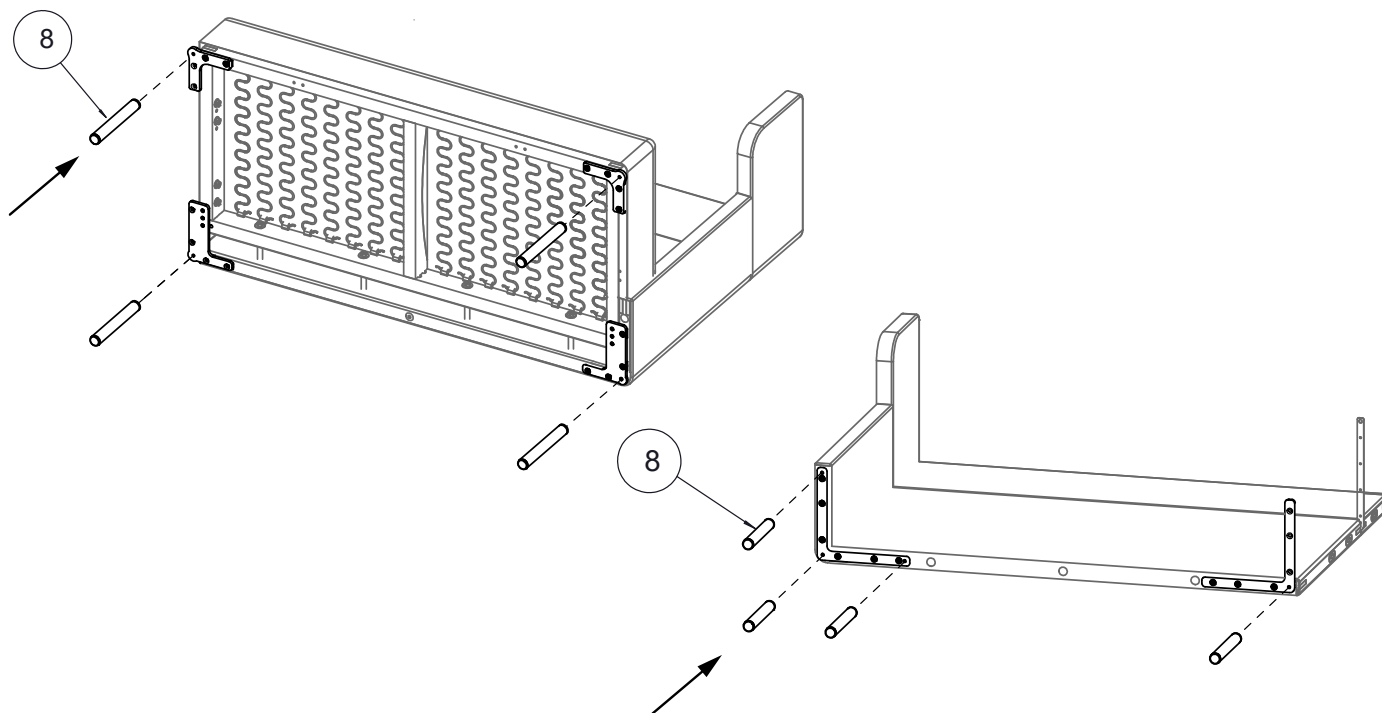


3

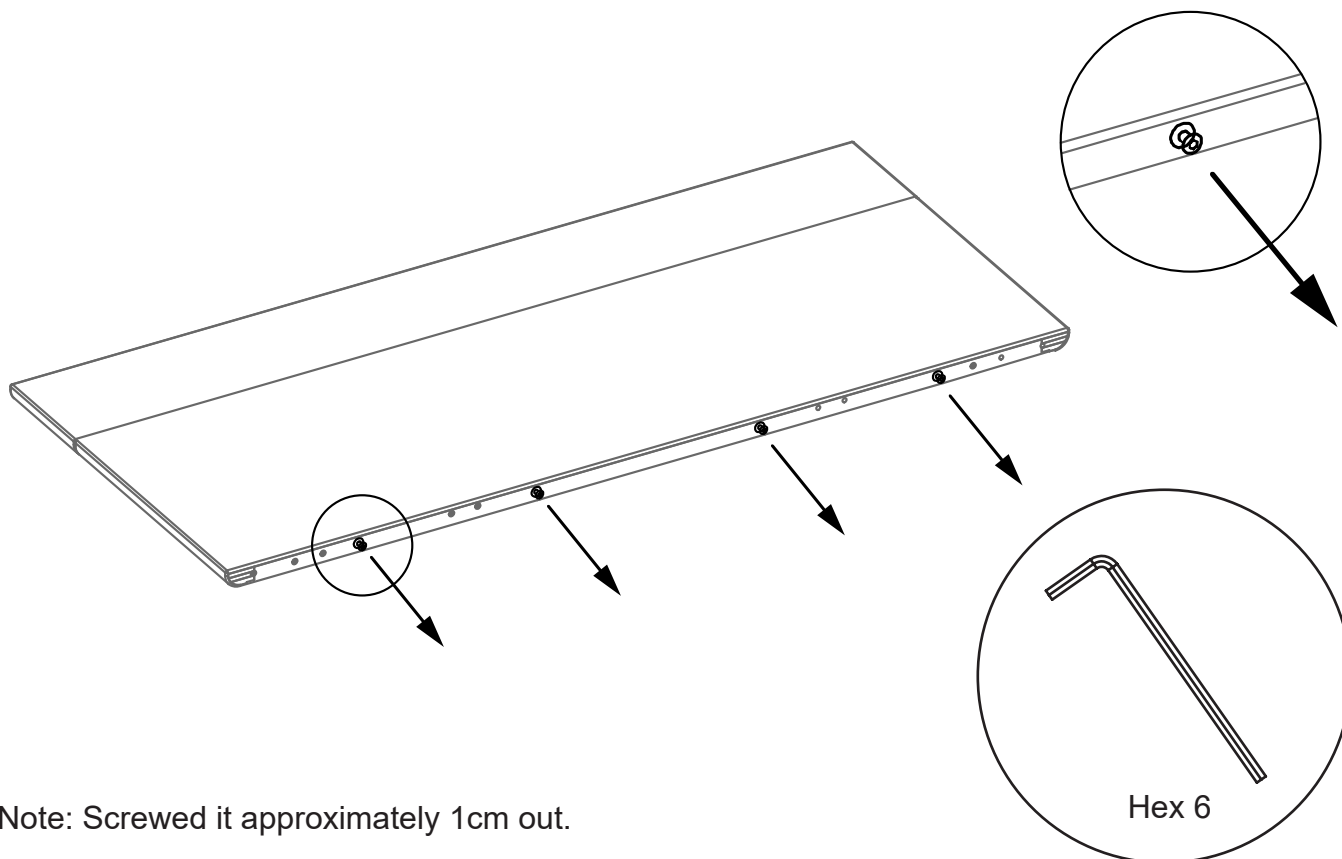

4

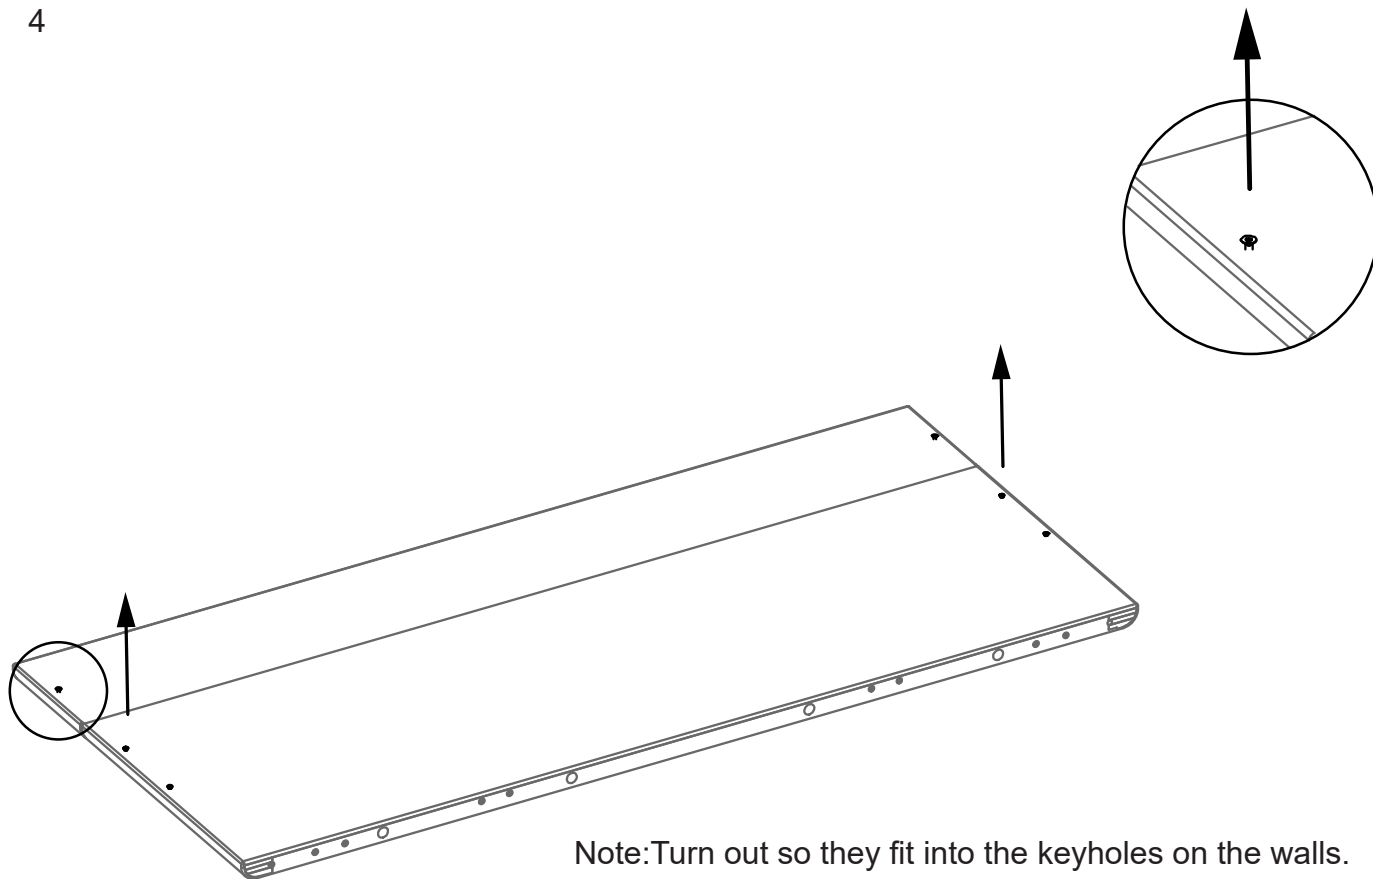


5


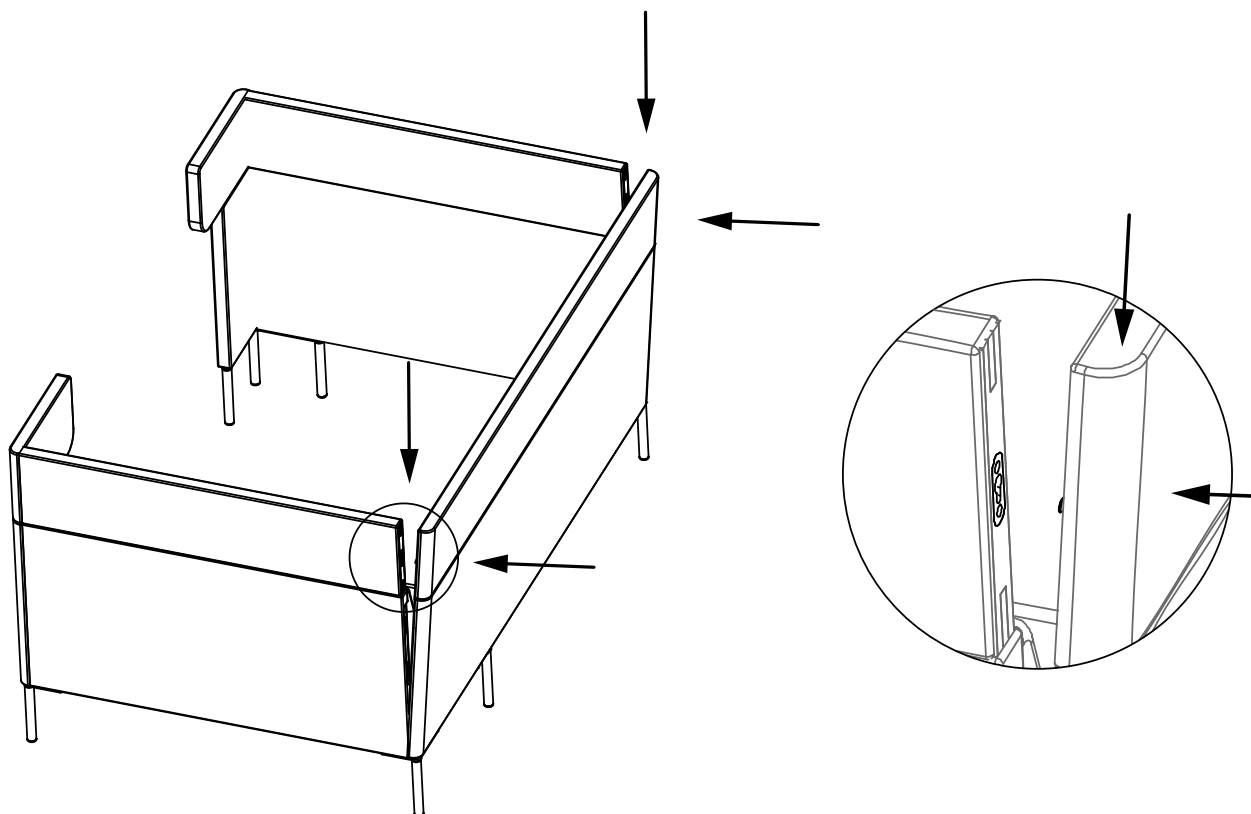


Note: The 3 screws on each side fit into the keyholes on the wall.

6

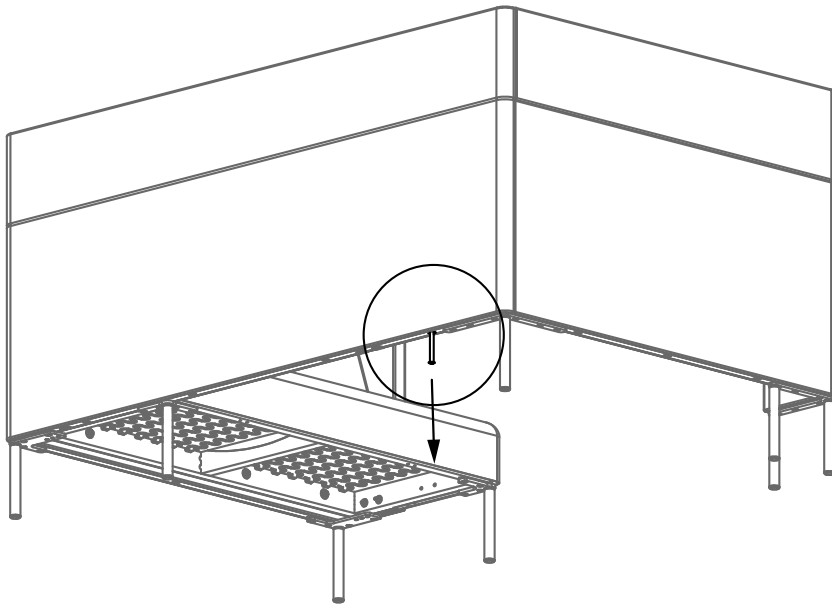



Note: Let the threaded rod drop to the floor.

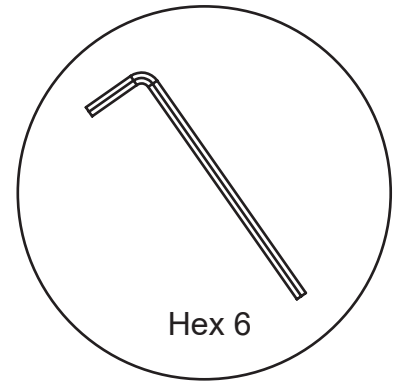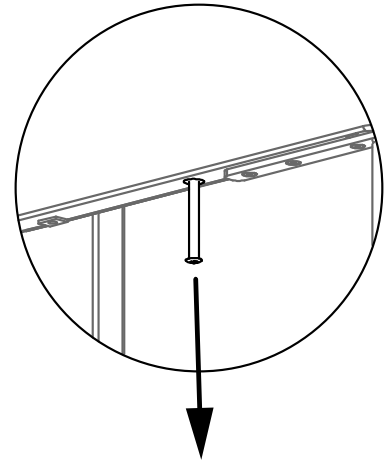

Hex 6


7

Note: Lift the top part of the wall 1 cm.

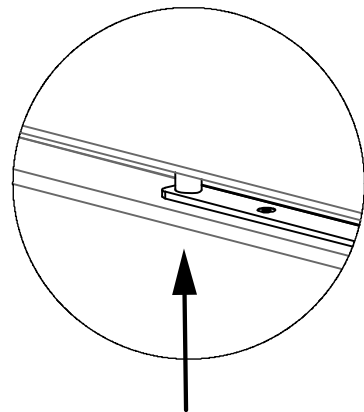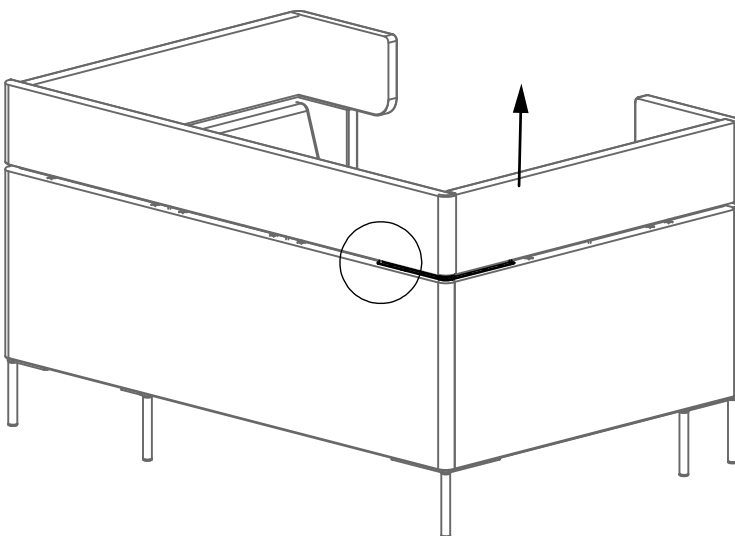



Note: Press the threaded rod so it is placed through the L-profiles hole.

8

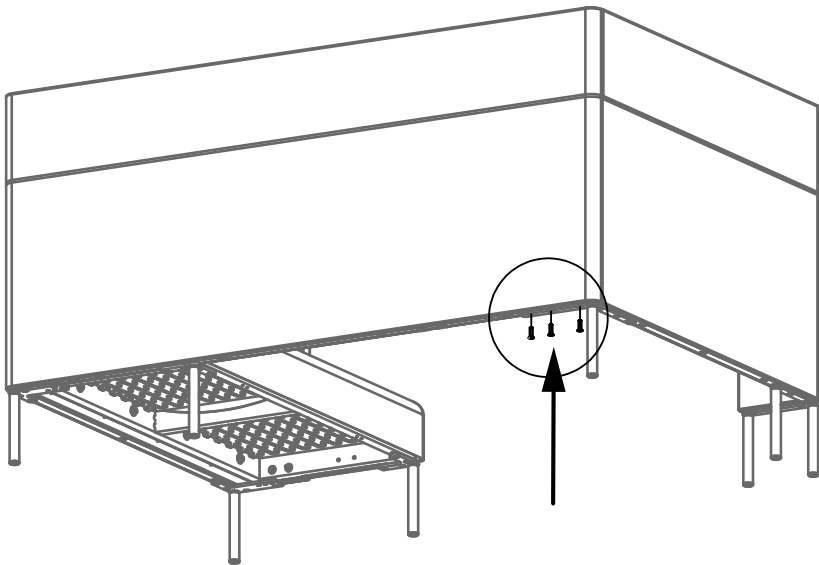


Note: it is important the footplate is a little loose, before tightening all the bolts.

9

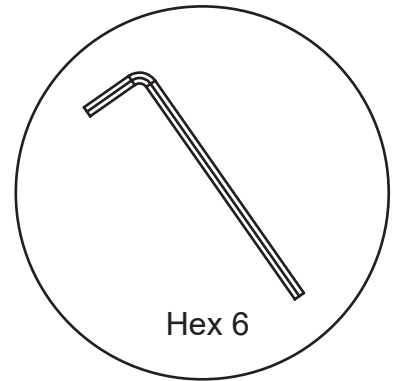
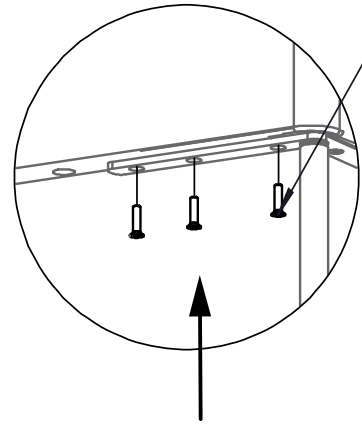


Hex 6

9


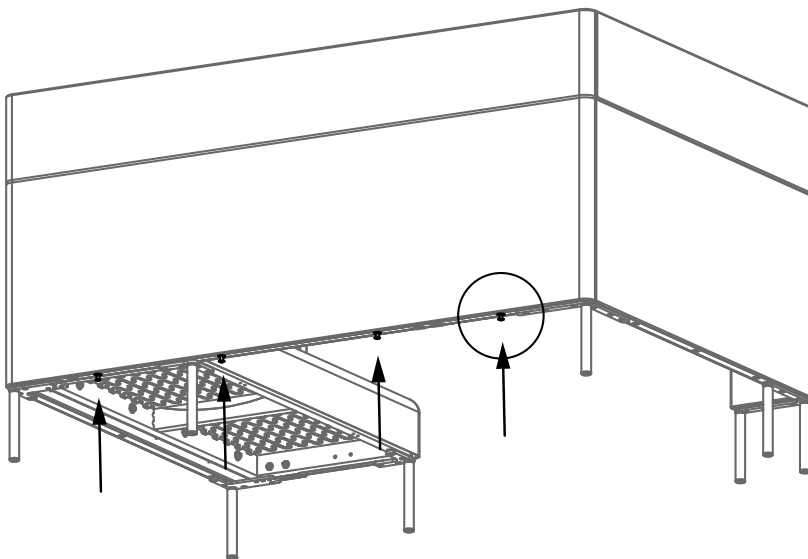


Note: Tighten until the gap in the backwall is gone.

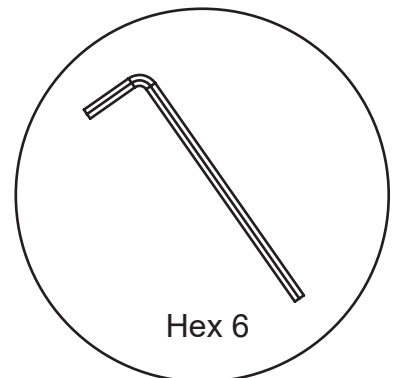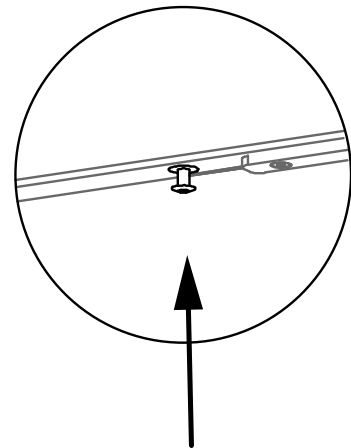


Hex 6

10


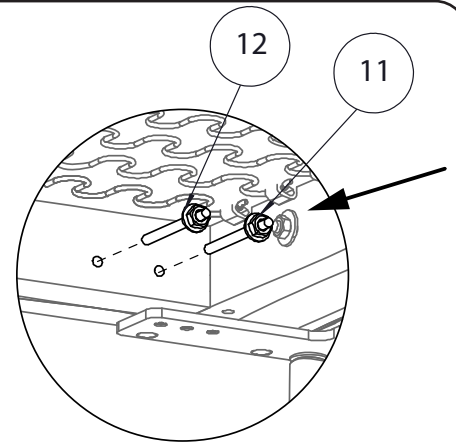
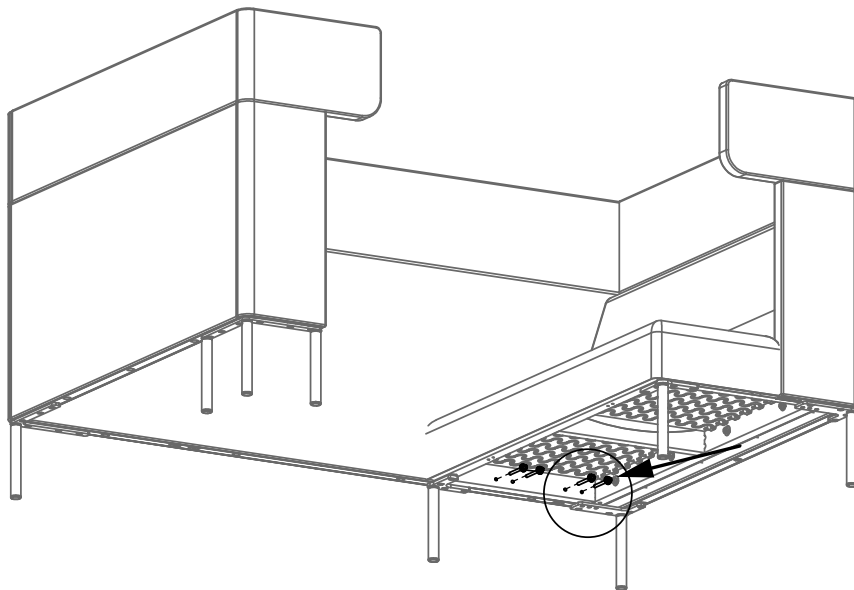


Note: tighten so hard, that you can hear the wood squeak.

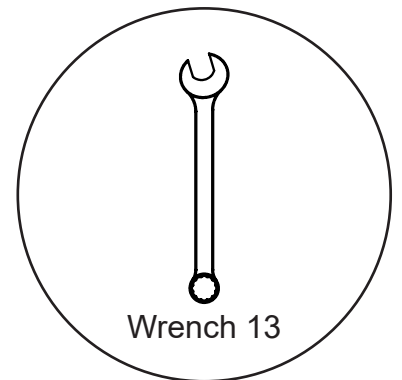

Note: It is important that the couch and wall are pressed together.


11

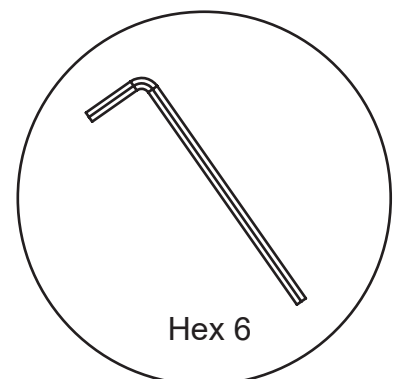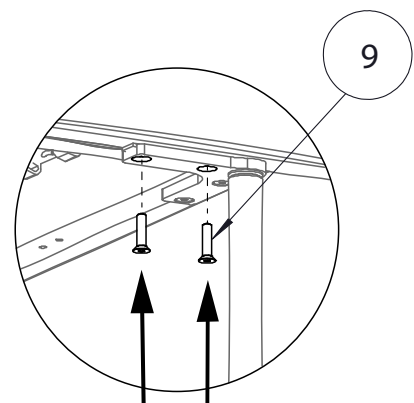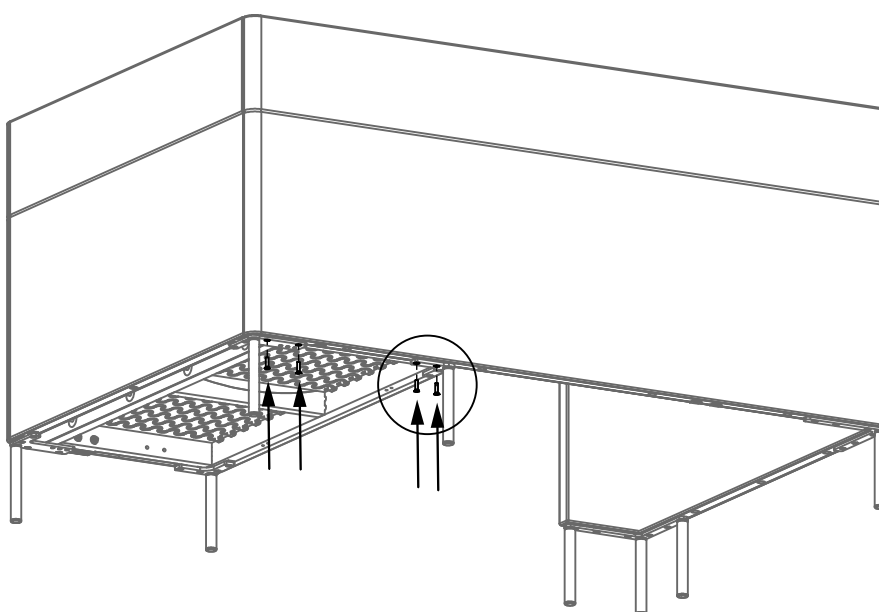


Note: Tweak the couch a little while aiming the bolts into the holes.



12

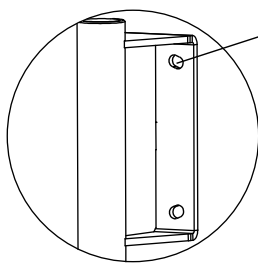


Height 650

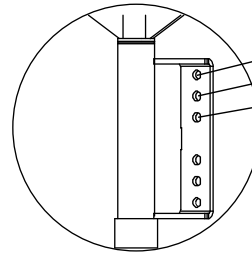

Height 680  
Height 700  
Height 720

Use wall hole no. 2 & 4 from the top




Use wall hole no. 1 & 3 from the top

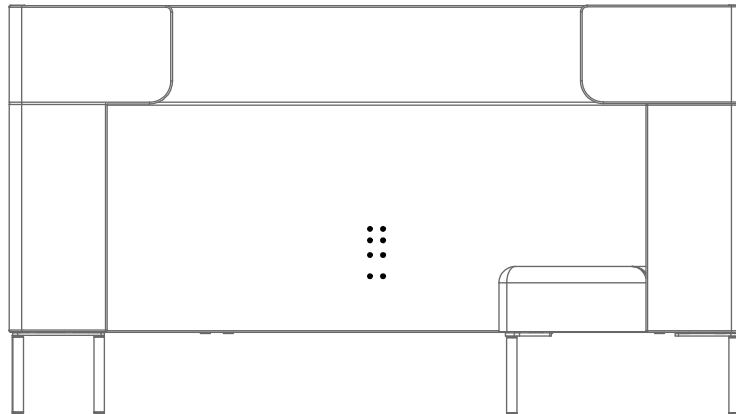

Note: The 8 holes for the pivottable which is marked with a white pin.  
Cut a 1cm cross lines on top of each the 4 holes you want to attach screws in.

13

Note: screw the bolts loosely in with the fingers, before tightening.

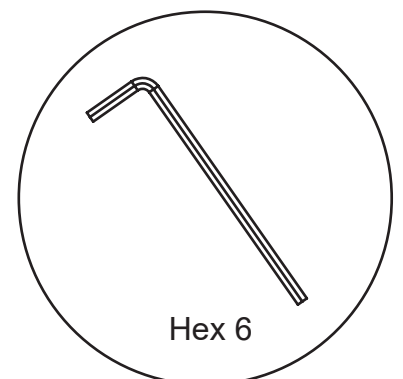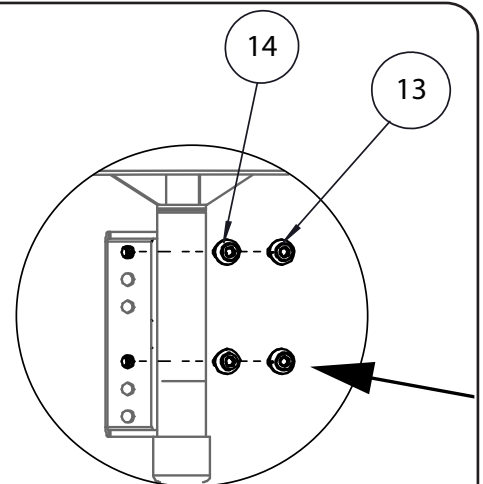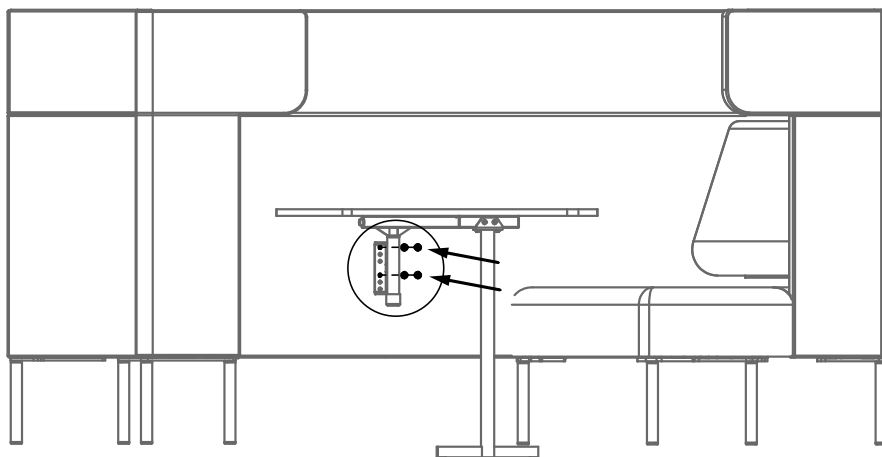

Hex 6

Note: When moving the FourUs Work Booth, it is important to be 4 or more people, to take as much pressure off the legs as possible.